

Wireless Intraoral camera

 **Air Direct**



Whicam

Enjoy Wireless

Wireless type

User manual

Eng

Kor

CE

Wireless Intraoral camera

 **Air Direct**



Whicam

Enjoy Wireless

Wireless type

User manual

Eng

CE

1. Introduction	04
- Features	
- Description	
- Overview	
2. Safety Information	05
- Symbols	
- Notes and reference	
- Installation and Connection	
- Operation	
- Maintenance	
3. List of Components	09
4. Parts and functions	10
5. Installation	11
6. How to use	15
7. Maintenance	17
8. Trouble Shooting	18
9. Specification	19
10. Accessories	20
11. Warranty	20
12. Warranty card	21

1 Introduction

Thank you for purchasing the device. The instructions described below have been designed to provide the necessary information for the successful operation, daily maintenance and safety for the use of this unit.

Features


- High speed digital wireless
- Autofocus
- Gyro mouse built-in
- Adjustable head angle
- 280° twist head
- Adjustable LED brightness
- Big capacity battery
- Software compatibility
- Easy to read OLED screen
- Dental image software included (DrsViewer2)
- 3 color impressions

Description


This device is an intraoral camera used to take images of the inside of the mouth or oral cavity.

Overview

1) Camera

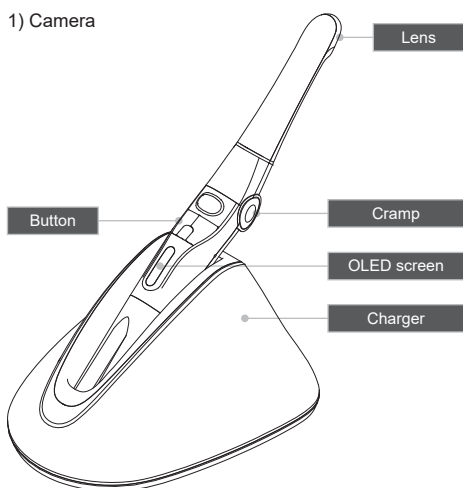

2) Receiver part

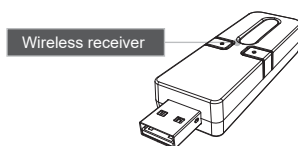

2 Safety information

It is important to understand the following information to use this product safely.

Symbols



Indicates a potentially hazardous situation which, if not avoided, may result in serious injury or death.



Indicates a potentially hazardous situation which, if not avoided, may result in minor/moderate injury or in damage of property.

Notes and References

Notes and References used in this manual are shown below.



Indicates that potential malfunctions may occur if the description is ignored.



Supplementary information to facilitate better operation.

2 Safety information

Installation and Connection



Warning

- The adapter should be disconnected from the charger before connecting the power cable to prevent an electric shock.
- Keep away from sources of ignition to avoid fire or explosion.
- Protect the device from any liquid to avoid electric shock or functional error.
- Place the charger on a flat and stable surface. Do not drop device and charger to avoid internal defect that may cause overheating or fire.
- Do not place the electrical cord near a gas burner or sources of heat. Should the cord catch on fire, replace with the new one to avoid short-circuit.



Caution

- Do not use or leave the unit in areas of high temperature or exposed to direct sunlight, internal circuit defect may cause overheat or fire.
- Securely connect the dust-free power plug to the outlet.
- Use this device in well ventilated areas. Overheating may cause fire.
- Do not touch the terminal areas of charger or battery with fingers or conductive objects, such as metal wire or safety-pin. It may cause electric shock or fire.
- Do not use any charger other than supplied. It may cause fire due to overheating.
- Do not place barrier between camera and receiver. It would make hesitation wireless data translation.

2 Safety information

Operation



Warning

- Do not plug the power cord with wet hands. This may result in an electric shock.
- In case of fluid leak from battery or partial discoloration/deformation of the device, immediately discontinue use.
- In case of partial discoloration of the device, immediately disconnect the power plug and repair it.
- In case battery fluid contacts the eye, immediately flush with copious amount of clean water and seek medical attention.
- Do not use this product on a person with a pacemaker as it may cause malfunction of the pacemaker.
- Should use disposable cover to avoid cross-infection.



Caution

- Disconnect the power cord by grasping the power plug to avoid injuries or burns.
- Avoid damage or use of unnecessary force on the power cord and device. This may cause an electric shock, fire, or malfunction.
- Should battery fluid contact the skin or clothes, immediately wash it off with copious amount water to avoid skin damage.
- Do not use this product for any purpose other than dental use.
- This device is not water prove. Use disposable cover when use to avoid wet the device. In case of malfunction due to this case, it is not covered by warranty.
- For safety, disconnect the adapter from charger in case of device is not charging.
- The product may malfunction or disconnect from the PC due to static electricity.

2 Safety information

Maintenance



Warning

- Use only accessories supplied to avoid fluid leak, explosion, or malfunction.
- Do not disassemble or overhaul the device. Unusual performance may cause injuries, electric shock, fire, or malfunction.
- Ensure that charger and camera are always separated from the device prior to cleaning.
- Be careful from any liquid when clearing.




Caution


- Do not use solvent (containing orange oil, ethanol or acetone) when clean the device. It may cause malfunction.
- User must be in charge of operation, maintenance and check.

3 List of components


Please check the contents described below when removing the contents from the original packaging.

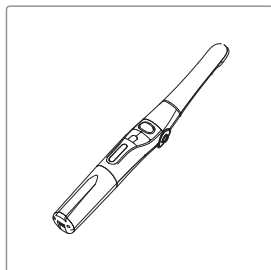


Camera
(Part No. WHTM1005)

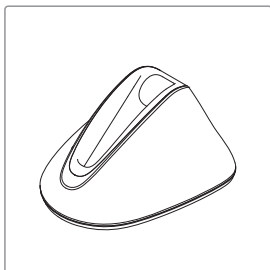


Charger
(Part No. WHTM2001)

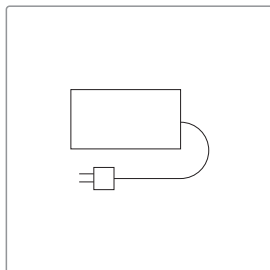


Adapter
(Part No. AC0105)

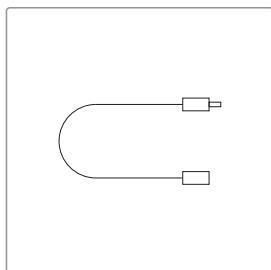

Power cable
(Part No. AC0111)

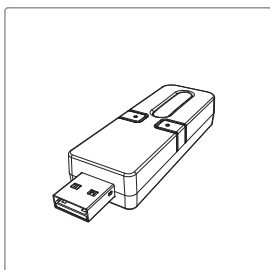


Receiver-Air Direct
(Part No. AC0216)

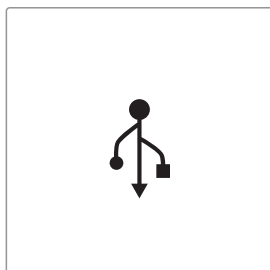


Data USB
(Part No. AC0201)



Disposable plastic cover
(35 x 100mm / narrow)
(Approx. 100pcs)
(Part No. AC0103)

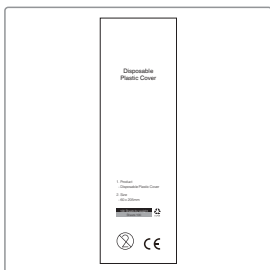


Disposable plastic cover
(60 x 205mm / narrow)
(Approx. 100pcs)
(Part No. AC0102)

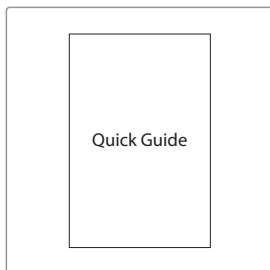

Quick Guide
(Part No. WHT080801)

4 Parts and functions

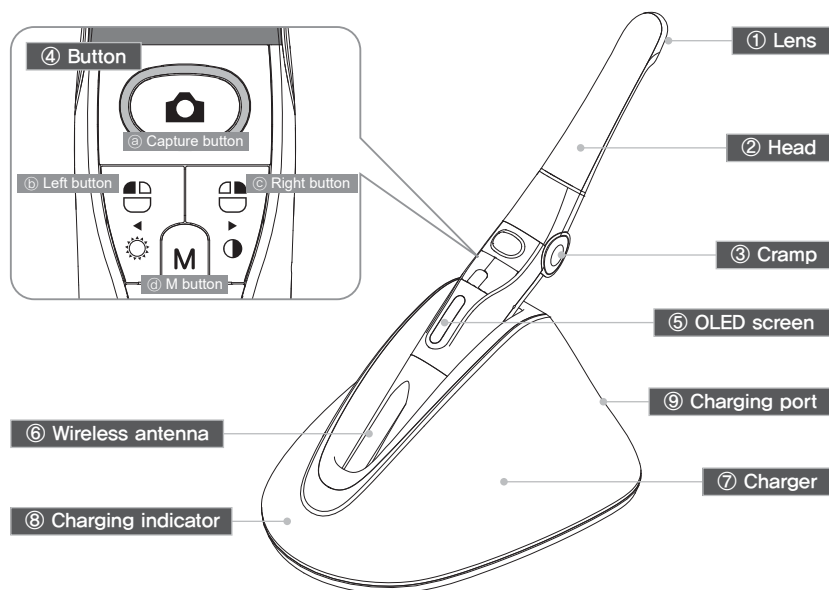

① Lens

- Image is reflected on the lens through prism.

② Head

- Twistable 280° degrees

③ Cramp

- Change head angle (3 steps)

④ Button

- ① Capture button
 - Image capture, focus adjusting, select
- ② Left button
 - Mouse left button
- ③ Right button
 - Mouse right button
- ④ M button
 - Mouse moving activate, setup mode, cancel

⑤ OLED screen

- Show the device states

⑥ Wireless antenna

- Data is sent from this antenna to receiver.

⑦ Charger


- Charging the device

⑧ Charging indicator

- Red: On charging
- Blue: Full charged

⑨ Charging port


- Connect the AC adapter for charging

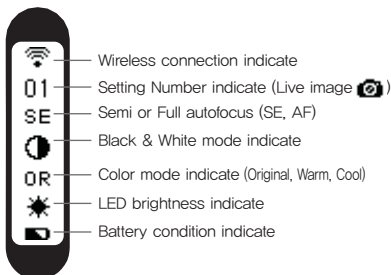

5 Installation

1. Camera head rotation



Be careful and do not force much when Head rotation

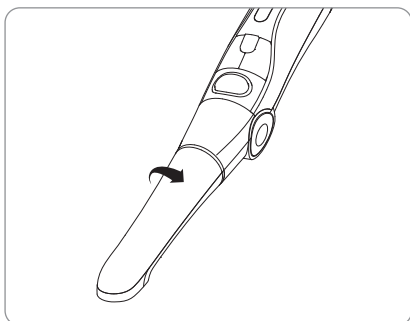

Spin the camera head for arrow direction.

2. Change the camera head angle

Push the both cramp and change the camera head angle.

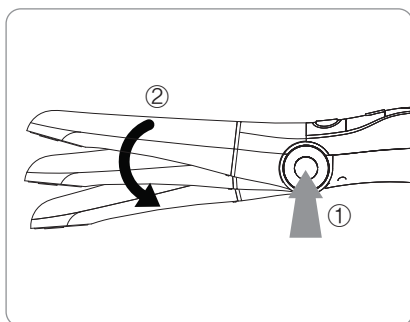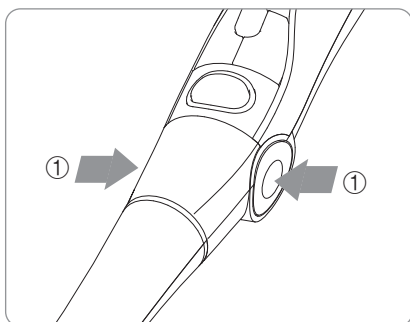


Should use cramp when change the angle. If don't the durability will be weaker.

5 Installation

3. Receiver installation


- 1) Connect the receiver to the USB port on your PC

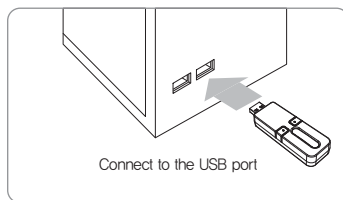

- 2) After approximately 5 seconds, the receiver will display a logo and the receiver's default number "001"




- 3) To change to a number that does not overlap with other receivers, press the ▲ and ▼ buttons on the receiver to change the number.
(Press and hold the ▲ and ▼ buttons to change quickly.)




4. Camera connection


- 1) To use the camera for the first time or to connect to another receiver, the camera requires a receiver connection setup.
- 2) Press and hold the capture button to power on the camera.
- 3) Double-click the Capture button to search for a connectable receiver.

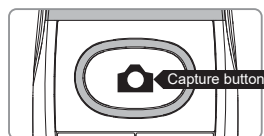

- 4) When number of connectable receiver is displayed, use the left/right buttons on the camera to navigate to the receiver number to connect and press the capture button to select it.



Select the number of receiver

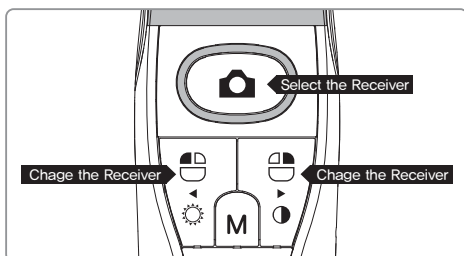


5 Installation

5) When "Air Direct connected" message shows up and connected well, receiver's number will display in the main screen which is connected to wireless icon



Successful connection



Not connected with the receiver




Number with at least 3 digits



Reference

More than 3 digits of number will display as "00" and you can check the whole number with pressing M button

6) when you press and hold on M button while the viewer is turned off, 3 digits number of connected receiver will display

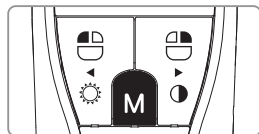

Reference

- When the camera is powered off and on, it automatically connects to the receiver with the set number
- If it doesn't connect automatically after 20 seconds, you can connect manually by double-clicking the capture button

5. Dr's Viewer2 installation

- Download Dr's viewer if there is no any viewer software program



Reference

If you are using any other software, please contact your supplier

< Installation Dr's Viewer2 screen >

5 Installation


6. Camera device setup

- Click and hold left button and right button for 3 seconds. Then the device is turn to setup mode.



Reference

- ① Capture button: select
- ② Left button: down
- ③ Right button: up
- ④ M button: Cancel

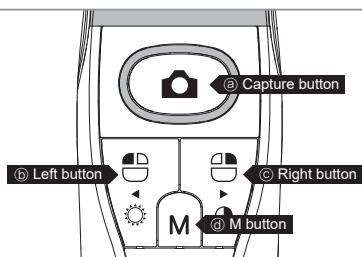

1) Capture key setting

- Select appropriate capture key
- Default value is "Space"



Reference

Capture key can be changed with "HIDDRs Manager" in the USB Memory.

2) Mouse speed

- Select appropriate gyro mouse speed. (5 levels)
- Default level is 3

3) Turn off time

- Select turn off time of device (5, 10, 15, 20, 30 mins)
- Default time is 5 mins.

4) Autofocus & Autocapture

- Select "Disable" or "Enable"
- Default value is "Disable"

To avoid shaking image there is Auto capture function.



Reference

* Auto capture:

- Semi autofocus (Disable): Half click and hold the condition, image is captured after 1 seconds after get focus, and image is captured for every 2 seconds.
- Full autofocus (Enable): Half click is image capture and hold the condition, image is captured for every 2 seconds.

6 How to use

1. Turn on the device

- Click the capture button. Then the device is turn on with LED blink and beep sound.

2. Image capture

- Click camera icon on the DrsViewer2. Then live image is shown.
- Half click is focus adjusting, and click is image capture.
If the mode is full autofocus mode, half click is image capture.




Reference

Default setup is semi autofocus. And capture key is "Space"
To use other company software, need to check capture key.
Or need to use twain driver.


3. Mouse

- To move mouse cursor click M button and shake the device.
Then mouse cursor is moved as device is shook

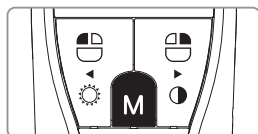



4. Color impression changing

- Click M button and capture button on live image.
Then the color impression is changed.
- Original ⇒ Warm ⇒ Cool color impression is rotated.

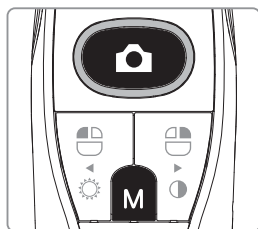

5. Brightness change

- Click M button with mouse left button. Then LED brightness is changed.

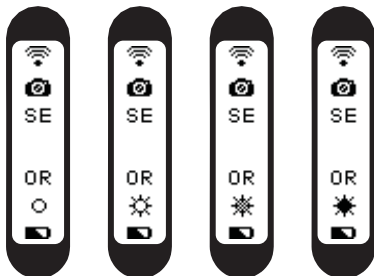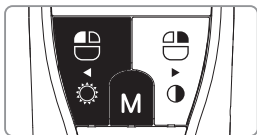

Turn off ⇒ Brightness LV1 ⇒ Brightness LV2 ⇒ Brightness LV3 is rotated.





Reference

Brightness change is worked on live image is on.

6 How to use

6. Black & White mode

- Click M button with mouse right button.
Then LED turn off, and live image changed to black & white mode.

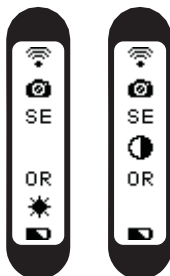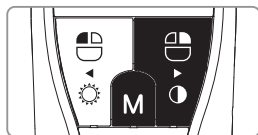

Normal ⇒ Black & White mode is rotated.




Reference

Black & White mode is worked on live image is on.


7. Setup mode

- Click left button and right button both for 3 seconds.
Then setup mode is shown.
- About setup mode, please refer,
"5. Installation ⇒ 6. Camera device setup."

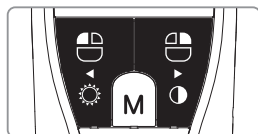

8. Turn off

- Click the capture button for 3 seconds, the device is turned off.
- The device is turned off automatically, if there is no signal for minutes set on setup mode.

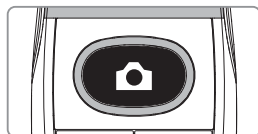


Reference

- User can adjust the sleep mode time for 5, 10, 15, 20, 25, and 30 minutes on setup mode.
- If wireless connection is not connected, device will be turn off after 2 minute.

9. Reset

- If the device doesn't work normally, reset the device. Then the device will be reboot.

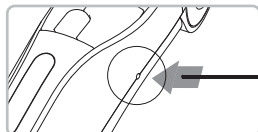

Cleaning and disinfection

- Clean the camera and charger gently with clean, soft, lint-free cloth.
- Avoid using solvents which contain ethanol or acetone.
- Do not use sharp or pointed tools to clean as they may damage or scratch the plastic.
- Be careful not to spill any liquid into the device.
- Use disposable cover when use the device to avoid cross-infection and spilling any liquid into the device.

Maintenance and replacement of the battery.

- Do not disassemble the device for any purpose.
- To replace the battery, please contact authorized dealer or manufacturer.
- It is recommended for rechargeable battery to be charged immediately before use to maximize efficiency.

8 Troubleshooting

If the device not works normally, please refer to the following points.

Problem	Cause and solution
Button doesn't work	<p>If the button is pressed with excessive force, it will not work, try pressing the button gently. And check the button condition.</p> <p>If the device is not recognized well, the button could not work well. Refer "5. Installation", "6. How to use"</p> <p>If connection between camera and receiver is not connected, the button doesn't work. Please avoid any barrier between camera and receiver.</p>
Display screen does not work	<p>If the battery voltage is extremely low, the device is not turned on. Please charge the battery.</p>
Power off while in operation	<p>If the battery voltage is extremely low, the device could be turned off. Please charge the battery.</p>
Not able to capture image	<p>Capture key-value would not match with other company dental viewer software. Please check keyboard short-cut. If you don't know it please ask the dental viewer software vendor.</p> <p>And check the key-value of device. Or use twain driver included.</p>
Live image is not shown	<p>If the device is not recognized well, live image is not shown. Please check camera and receiver connection, and check imaging device of device manager.</p> <p>If there is TV tuner in the PC. The image could be not shown. Check "Disable" the TV tuner device on the device manager.</p> <p>If you use other company dental viewer software, it would be related with its setting. Please ask to the dental viewer software vendor.</p> <p>If you use other company dental viewer software, other imaging device (ex. Web-cam, etc.) should be checked for "Disable".</p> <p>This device support only MJPG (MPEG) format. If you use other company dental viewer software, please check the viewer support MJPG or MPEG. Please ask to the dental viewer software vendor.</p> <p>Some codec makes block or delay the live image shown. Uninstall the codec file. (ex. klite codec and etc.)</p>

* If the trouble is not fixed after following solution, please contact your local dealer or manufacturer.

9 Specification

■ Equipment Class

Model:	IC-WHT60
Trademark:	Whicam Air
Power supply:	3.7V Lithium Ion
Receiver:	5V USB power
Protection from ingress of liquids:	IPX0 (ordinary equipment)

■ Operation, transport, and storage condition for the main unit

	Operation	Storage	Transport
Temperature	10~30C	10~40C	-10C~50C
Humidity	10~80%	20~80%	20~80%
Atmospheric pressure	800 ~ 1360 hPa		

■ Additional Information

Camera (included head)	Operation voltage	3.7V
	Measurement	Approx. 266 x 31 x 37 mm
	Weight	Approx. 140g
	Resolution	5M pixels
	Sensor/Lens type	CMOS / Liquid lens
Charger	Operation voltage	5V
	Measurement	Approx. 169 x 148 x 89 mm
	Weight	Approx. 170 g
Disposable cover	Quantity	Approx. 100 pcs by weight x 2ea
	Raw material	Polyethylene
Adapter	Input voltage	AC 100 ~ 240 V
	Output voltage	DC 5V 2A
	UL number	E333054

■ Minimum system requirement

PC system:	3.3 Ghz CPU, 4GB RAM
OS:	Windows 7
USB port:	USB 2.0

(Internet access would need for some kinds of PC environments)

* Upper specification is changeable without prior notice.

■ Symbol



This device conforms with the European Directive, 93 / 42 / EEC which includes the requirements for electromagnetic compatibility



This symbol is appixed to fulfill the requirements of EU Directive 2012/19/EU Article 11. This equipment cannot be disposed of as unsorted municipal waste within the European Union. Follow local regulations for disposal.












SN

Serial number 00 00 00 0000
Model / Month / Year / Serial




Warning, Caution


9 Specification

	Type B applied part		Manufacturer
	Authorized representative in the European Community		Check user manual.
	Prevent by wet.		This box is paper recyclable.
	Transport temperature.		No hooks
	Reuse is not allowed		Fragile item
	Do not device on place where get direct sunshine.		


10 Accessories

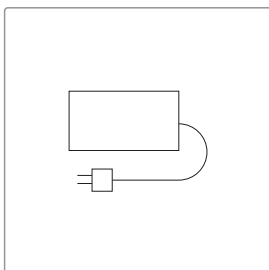

Adapter
(Part No. AC0105)

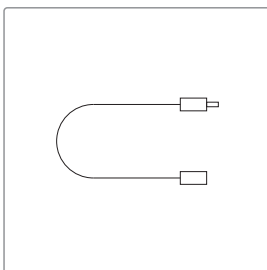

Power cable
(Part No. AC0111)

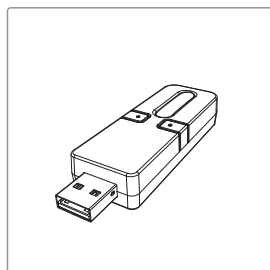


Receiver-Air Direct
(Part No. AC0216)



Disposable plastic cover
(35 x 100mm / narrow)
(Approx. 100pcs)
(Part No. AC0103)




Disposable plastic cover
(60 x 205mm / narrow)
(Approx. 100pcs)
(Part No. AC0102)

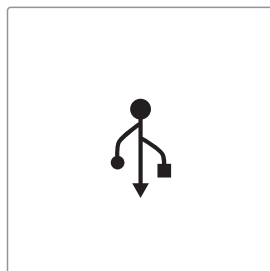

Data USB
(Part No. AC0201)

10 Accessories

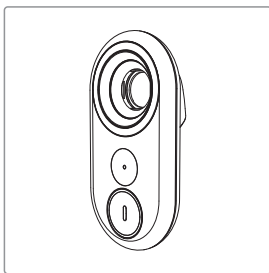

EIOS
(Part No. AC0213)


11 Warranty

This product is only shipped after strict inspection. Should the product incur any problems under normal use conditions within one year from the date of purchase, the repair will be free of charge.

However, repair of consumables (Disposable Cover, and etc.) are not covered by the warranty.

For more information, refer to the 12. Warranty card attached.

Serial number check.

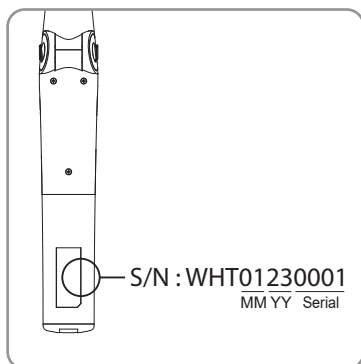

EC REP **Good Doctors Germany GmbH**

Gerhard-Domagk-Str. 2, 53121 Bonn, Germany
TEL: +49 (0) 228/53 44 14 65 FAX: +49 (0) 228/53 44 14 66
www.gooddrs.de

Good Doctors Co., Ltd.

#208, B-dong, 283 Bupyeong-daero, Bupyeong-gu
(Woolim Lions Valley, Cheongchoen-dong), Incheon,
21315, Republic of Korea
Tel : + 82 32 424 6325 Fax : + 82 32 424 6326
E-mail : info@gooddrs.com Website : www.gooddrs.com



We guarantee the quality of the product as follows

Name of product :

Name of model :

Customer information

- Office name :
- Office phone :

Distributor

- Dealer name :

Assurance period

- Date of purchase : from , 20
- Product is for 1 year except accessories.

< Assurance details >

1. If there is any defect of manufacturer or product has any fault itself within the assurance period, it will be replaced with the same product.
2. Below cases are not effective for the free refund.
 - Malfunction and damage according to user's carelessness.
 - Malfunction and damage according to natural disaster such as fire, earthquake and flood etc.
 - Malfunction and damage according to user's intention or accident.
 - Malfunction and damage according to using incompatible product.
3. The manufacturer does not accept any liability resulting misuse.



Good Doctors Co., Ltd.

#208, B-Dong, 283, Bupyeong-daero, Bupyeong-gu, Incheon, Korea (Cheongcheon-dong, Woolim Lions Valley) (Zip code : 21315)
Tel: +82 32 424 6325 Fax: +82 32 424 6326

Wireless Intraoral camera

 **Air Direct**



Whicam 

Enjoy Wireless

Wireless type

User manual

Kor

CE

1. 소개	26
<ul style="list-style-type: none"> - 특징 - 사용목적 - 개요 	
2. 안전에 관한 정보	27
<ul style="list-style-type: none"> - 기호 - 노트와 참조 - 설치 시 - 사용 시 - 유지보수 시 	
3. 내용물	31
4. 부품 및 기능	32
5. 설치 방법	33
6. 사용 방법	37
7. 유지 보수	39
8. 문제 해결	40
9. 사양	41
10. 악세서리	42
11. 품질 보증	43
12. 품질 보증서	44

1 소개

본 제품을 구매해주셔서 감사드립니다.

본 매뉴얼에는 제품 설치, 사용 및 유지보수에 관한 사항이 적혀있습니다.

안전하고 원활한 사용을 위하여 본 매뉴얼을 꼭 읽고 숙지 해 주시길 바랍니다.

특징

- 하이스피드 디지털 무선 방식
- 오토 포커스
- 내장형 자이로 마우스
- 조절 가능한 헤드 앵글
- 280도 회전 헤드
- LED밝기 조절 가능
- 대용량 배터리
- 소프트웨어 호환성
- OLED 화면
- DrsViewer2 소프트웨어
- 3가지 색상 선택가능

사용목적


구강 내를 비추어 확대해 볼 수 있는 카메라 장비

개요

1) 카메라



2) 수신기 파트

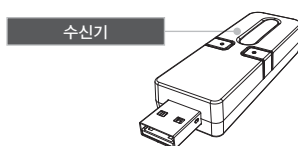

2 안전에 관한 정보

다음의 정보들은 제품의 안전한 사용을 위한 표시입니다.

기호



경고

발생할 경우 심각한 부상이나 죽음에 이를 수 있는 잠재적인 위험요소



주의

발생할 경우 가벼운 부상이나 재산상의 피해를 야기하는 잠재적인 위험요소

노트와 참조

노트 및 참조 표시는 다음의 경우에 표시됩니다.



노트

무시할 경우 제품의 고장을 야기할 수 있는 사항



참조

보다 나은 사용을 위한 부가정보

2 안전에 관한 정보

설치 시



경고

- 감전을 방지하기 위해서 어댑터의 전원케이블은 전원이 입력되기 전에 충전기로부터 분리가 되어있어야 합니다.
- 화재나 폭발을 방지하기 위해 발화물질 등에 제품을 가까이 두지 마십시오.
- 감전이나 기능적인 에러 등을 방지하기 위해 액체나 습기 등으로부터 제품을 보호해주십시오.
- 충전기를 평평하고 안정된 곳에 위치시켜 두십시오. 제품을 떨어뜨릴 경우내부적인 고장이나 발열, 화재 등의 위험이 있을 수 있습니다.
- 전원케이블 등을 가스버너나 열기구 등 근처에 두지 마십시오. 케이블이 손상된 경우 구입처나 제조사로 연락 주십시오.



주의

- 제품을 온도가 높은 곳이나 직사광선이 비치는 곳에 두지 마십시오. 내부적인 기능문제, 발열 혹은 화재의 위험이 있습니다.
- 전원코드를 꽂을 경우 먼지 등 이물질이 있는지 확인 해주십시오.
- 발열이나 발화를 방지하기 위해 제품 사용 시 환기가 잘 되는 곳에서 사용하십시오.
- 배터리나 충전기 단자에 손가락이나 전선, 클립 등의 전도성 물체를 닿게 하지 마십시오. 감전이나 화재의 위험이 있습니다.
- 제공되는 충전기 이외의 타사제품을 사용하지 마십시오. 화재나 발열의 위험이 있습니다.
- 카메라와 수신기 사이에 장벽 등을 세우지 마십시오. 무선 송수신의 문제가 생길 수 있습니다.

2 안전에 관한 정보

사용 시



경고

- 전원코드를 젖은 손으로 만지지 마십시오. 감전의 위험이 있습니다.
- 배터리로부터 액체가 흐르거나 부분적인 변형이 오는 경우 즉각 사용을 중단하십시오.
- 제품의 부분적인 변형이나 변색이 온 경우에는 전원을 분리하시고 수리를 받으십시오.
- 배터리로부터 흘러나온 액체가 눈에 들어갔을 경우, 즉각 흐르는 물에 씻어주시고, 병원으로 가 상담을 받으시기 바랍니다.
- 제품을 피스메이커를 장착하고 있는 사람에게 사용하지 마십시오. 피스메이커의 고장을 일으킬 수 도 있습니다.
- 교차감염을 방지하기 위해 일회용커버를 반드시 사용하십시오.



주의

- 부상이나 화재를 방지하기 위해 전원케이블을 분리하는 경우 전원코드를 잘 잡고 분리해주시기 바랍니다.
- 제품이나 전원케이블에 무리한 힘을 가하지 마십시오. 감전이나 화재, 고장의 위험이 있습니다.
- 배터리로부터 흘러나온 액체가 피부나 옷 등에 묻었을 경우, 화상을 방지하기 위해 즉시 흐르는 물로 제거해주시기 바랍니다.
- 본 제품을 치과용 목적 이외의 목적으로 사용하지 마십시오.
- 본 제품은 방수가 되지 않는 제품입니다. 제품이 젖는 것을 방지하기 위해서 반드시 일회용커버를 사용하시기 바랍니다. 침수에 의한 고장은 제품보증에 대한 사항에서 적용되지 않습니다.
- 안전을 위해, 제품을 충전하지 않는 경우에는 어댑터를 분리하십시오.
- 상기 제품은 정전기에 의하여 오작동 또는 PC와의 연결이 끊어질 수 있습니다.

2 안전에 관한 정보

유지보수 시



경고

- 누설전류, 폭발 혹은 고장 등을 방지하기 위해서 제공되는 배터리나 악세서리만을 사용하십시오.
- 제품을 임의로 분해하거나 수리하지 마십시오. 부상이나 감전, 혹은 화재의 위험이 있습니다.
- 제품을 청소할 경우, 충전기와 제품을 꼭 분리해주시기 바랍니다.
- 제품을 청소 시, 습기가 제품에 들어가는 것에 대해서 주의를 해주십시오.




주의


- 제품 청소 시, 에탄올, 아세톤 등이 들어있는 용매제를 사용하지 마십시오. 제품 고장의 원인이 될 수 있습니다.
- 사용자는 제품 사용과 관리의 책임이 있습니다.

3 내용물


제품 개봉 후 다음과 같은 내용물들이 있는지 확인 바랍니다.

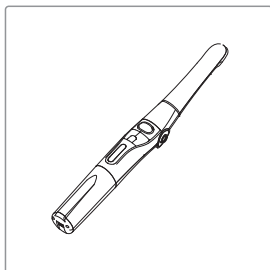


카메라
(Part No. WHTM1005)

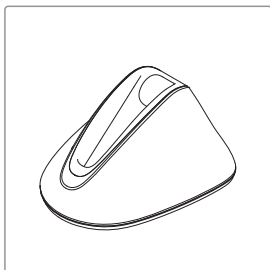


충전기
(Part No. WHTM2001)

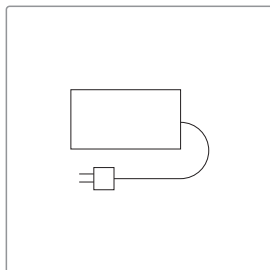


어댑터
(Part No. AC0110)

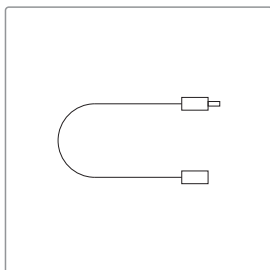

전원 케이블
(Part No. AC0111)

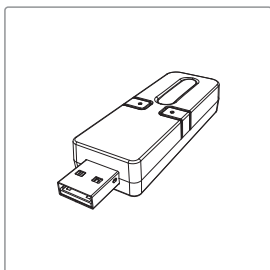

수신기-Air Direct
(Part No. AC0216)

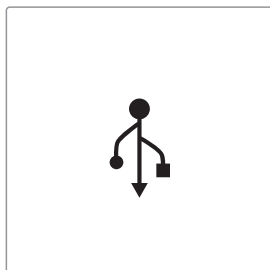


Data USB
(Part No. AC0201)



일회용커버 - 약 100매
(35x100mm / narrow)
(Part No. AC0103)




일회용커버 - 약 100매
(60 x 205mm / narrow)
(Part No. AC0102)

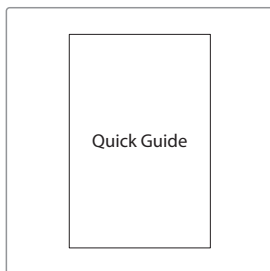

퀵 가이드
(Part No. WHT080801)

4 부분 및 기능

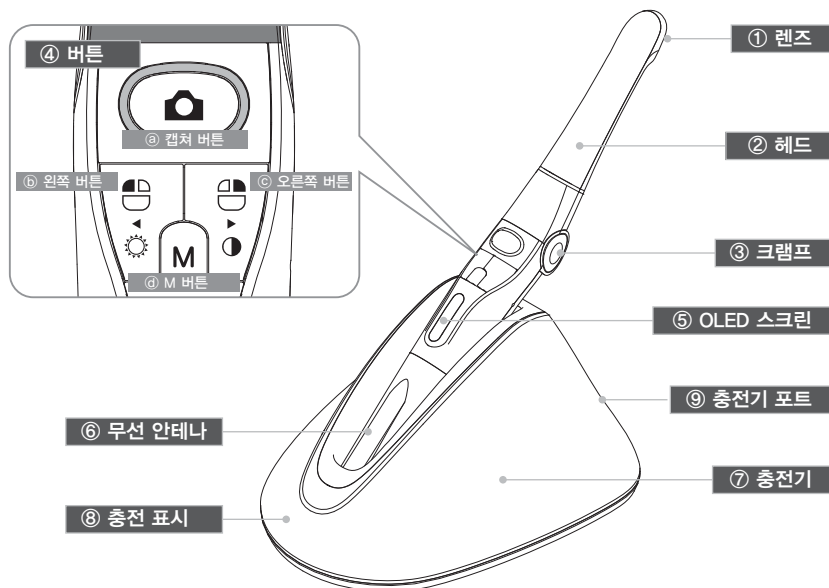

① 렌즈

② 헤드

- 280도 회전

③ 크램프

- 헤드 앵글 변경 (3단계)

④ 버튼

- ④ 캡처 버튼
- 이미지 캡처, 포커스 조절, 선택
- ⑥ 왼쪽 버튼
- 마우스 왼쪽 버튼
- ⑥ 오른쪽 버튼
- 마우스 오른쪽 버튼
- ④ M 버튼
- 마우스 움직임 활성화, 세팅 모드, 취소

⑤ OLED 스크린

- 제품 상태를 보여줌.

⑥ 무선 안테나

- 안테나와 리시버 사이의 데이터 수송선

⑦ 충전기


- 제품 충전기

⑧ 충전 표시

-빨강: 충전중
-파랑: 충전 완료

⑨ 충전기 포트


- AC어댑터 연결

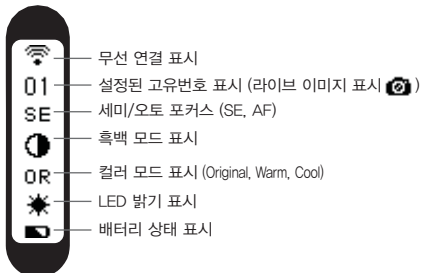

5 설치 방법

1. 카메라 헤드 회전



카메라 회전시 힘을 너무 많이 주지 마십시오

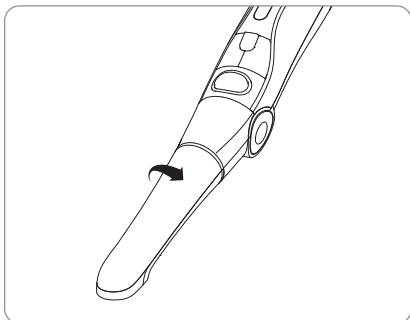

카메라 헤드를 화살표 방향으로 돌려주십시오.

2. 카메라 앵글 조절

양쪽 크램프를 동시에 누르면서 카메라 헤드 앵글을 조절하십시오.

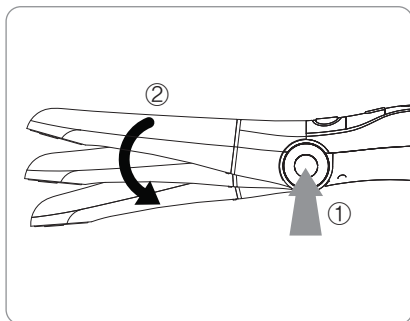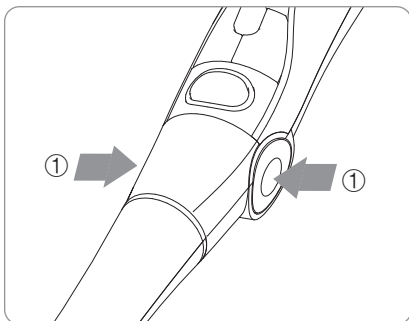


주의

앵글을 바꿀때는 크램프를 사용하십시오. 사용하지 않을 경우 고장날 수 있습니다.

5 설치 방법

3. 수신기 설치


- 1) 수신기를 PC의 USB 포트에 연결합니다.

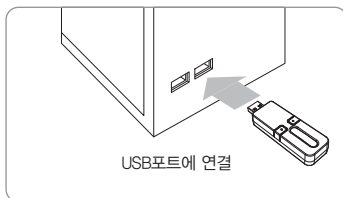

- 2) 약 5초 후 수신기에서 로그가 표시되고 수신기의 기본 고유 번호 "001"이 표시됩니다.




- 3) 다른 수신기와 중복되지 않는 고유 번호로 변경하려면 수신기의 ▲/▼ 버튼을 눌러서 고유 번호를 변경합니다. (▲/▼ 버튼을 누르고 있으면 빠르게 변경됩니다.)




4. 카메라 연결


- 1) 카메라를 처음 사용하거나 다른 수신기와 연결하려면 카메라에 수신기 연결 설정이 필요합니다.
- 2) 캡처 버튼을 길게 눌러 카메라 전원을 켭니다.
- 3) 캡처 버튼을 더블 클릭하면 연결 가능한 수신기를 검색합니다.

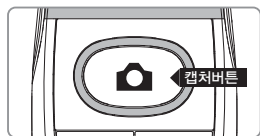

- 4) 연결 가능한 수신기 고유 번호가 표시되면 카메라의 왼쪽/오른쪽 버튼을 사용하여 연결할 수신기 고유 번호로 이동 후 캡처 버튼을 눌러 선택합니다.




수신기 고유번호 선택

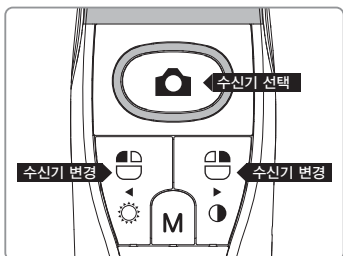


5 설치 방법


- 5) “Air Direct connected” 메시지가 나오고 정상적으로 연결이 되면,
무선 아이콘과 연결된 수신기의 고유 번호가 표시된 메인 화면이 표출됩니다.



정상적으로 연결 된 경우



수신기 연결이 안된 경우




3자리 이상의 고유번호



참조

3자리 이상의 고유 번호는 “00” 으로 표기되며 M 버튼을 누르고 있으면 전체 번호의 확인이 가능합니다.

- 6) 뷰어가 꺼진 상태에서 M 키를 누르고 있으면 현재 연결된 수신기의 3자리 고유 번호가 표시됩니다.

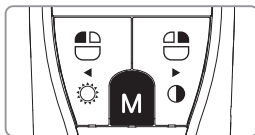

참조

- 카메라의 전원을 껐다 켜면 설정된 고유 번호의 수신기에 자동 연결됩니다.
- 자동 연결 시 일정 시간이 소요 됩니다. 20초 이상 지나도 자동으로 연결 되지 않으면 캡처 버튼을 더블 클릭하여 수동 연결이 가능합니다.

5. Dr's Viewer2 설치

- 만약 다른 뷰어 소프트웨어가 없다면 DrsViewer2를 설치하십시오.



참조


다른 소프트웨어를 사용하는 경우에는 구입처에 연락하십시오.

< Dr's Viewer2 설치화면 >

5 설치 방법

6. 카메라 장치 설정

- 왼쪽버튼과 오른쪽버튼을 동시에 3초 동안 누르고 있으면 설정 모드로 바뀝니다.

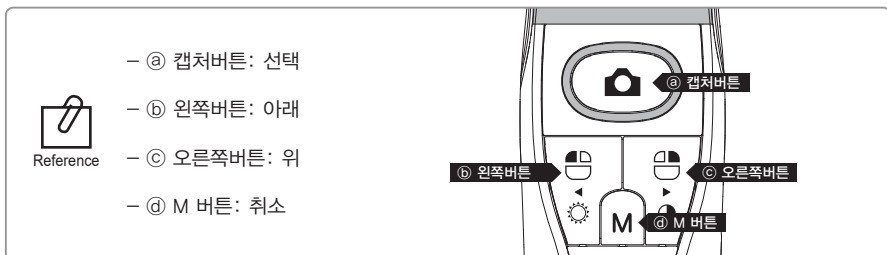

1) 캡처 키값 세팅

- 올바른 캡처키를 선택하십시오.
- 초기값은 스페이스입니다.



참조

캡처키는 USB 메모리 안에 있는 "HIDRs Manager"에서 바꿀수 있습니다.

2) 마우스 스피드

- 자기에 맞는 속도(5레벨)를 선택 하십시오.
- 초기값은 3레벨입니다.

3) 종료시간

- 장치의 꺼지는 시간을 선택하십시오.(5,10,15,20,30분)
- 초기값은 5분입니다.

4) 오토포커스와 오토캡처

- "Disable" 혹은 "Enable" 선택하십시오
- 초기값은 "Disable"입니다.



참조

사진촬영 시, 흔들림을 방지하기 위한 자동캡처 기능이 있습니다.

* 자동캡처

- 풀 오토포커스 (Enable): 하프클릭으로 사진이 찍히며, 하프클릭을 유지하는 경우 매 2초마다 사진이 찍힙니다.
- 세미 오토포커스 (Disable): 하프클릭으로 포커스를 맞춘 상태에서, 하프클릭을 유지하면 처음의 1초 뒤에 사진이 찍히며, 매 2초마다 사진이 찍힙니다.


6 사용 방법

1. 전원켜기

- 캡처 버튼을 누르십시오. LED가 깜박거리면서 삐 소리와 함께 켜집니다.

2. 이미지 캡처

- DrsViewer2에 카메라 아이콘을 클릭하십시오.
라이브 이미지가 보여 집니다.
- 포커스를 조절하기 위해서 카메라 아이콘을 살짝 눌러 주십시오.
누르면 이미지가 캡처 됩니다.
오토 포커스 모드에서는 반셔터 기능이 작동하지 않습니다.

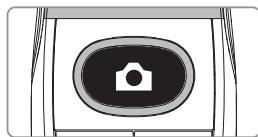


참조

디폴트 설정은 세미 오토 포커스이고 캡처키는 "스페이스"입니다.
다른 회사소프트웨어는 캡처키를 체크 해보거나 트와인 드라이버를 사용해야만 합니다.


3. 마우스

- 마우스 커서를 움직이기 위해서는 M 버튼을 누른 상태에서
카메라를 움직이십시오.
마우스 커서는 카메라가 움직이는 대로 움직입니다.

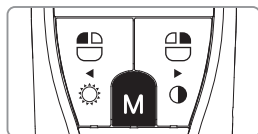



4. 색감 변화

- M 버튼과 캡처 버튼을 라이브 화면상에서 눌러주면 색감이
바뀝니다.
- Original ⇒ Warm ⇒ Cool 순서로 바뀝니다.

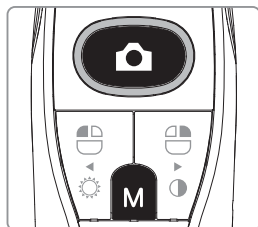

5. 밝기 조절

- M 버튼과 왼쪽 버튼을 클릭하면 LED 밝기가 변합니다.

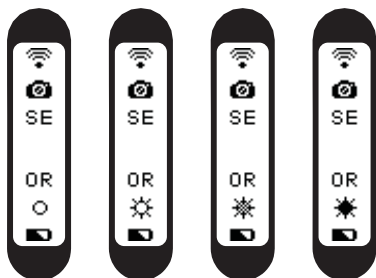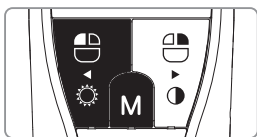

꺼짐 ⇒ 밝기1 ⇒ 밝기2 ⇒ 밝기3 순서로 바뀝니다.





참조

밝기조절은 카메라 기능이 활성화 되어있을 때만 작동합니다.

6 사용 방법

6. 흑백모드

- M 버튼과 오른쪽 버튼을 클릭 하십시오
LED가 꺼지고 라이브화면이 흑백으로 변합니다.

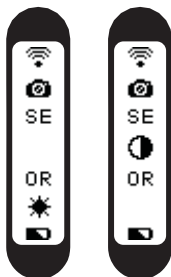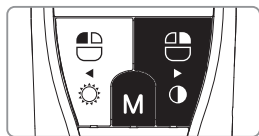

일반 ⇒ 흑백모드




참조

흑백모드는 라이브화면이 떠있을 때만 작동합니다.


7. 설정 모드

- 왼쪽과 오른쪽 버튼을 동시에 3초 동안 클릭 하면
설정 모드가 나옵니다.
- 설정 모드는, “5. 설치방법 ⇒ 6. 카메라 장치 설정”을 참고 하십시오.

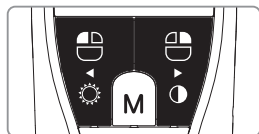

8. 꺼짐

- 캡처 버튼을 3초 동안 누르면 꺼집니다.
- 장치는 자동적으로 꺼집니다.
만약 몇 분 동안에도 신호가 없다면 설정 모드를 실행 해 보십시오

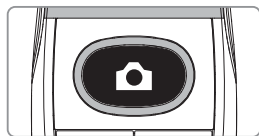


참조

- 사용자는 슬립모드 시간을 5,10,15,20,25,30분을 설정 모드에서 조절 할 수 있습니다.
- 만약 무선 연결이 안 되어 있을 경우 장치는 2분후에 꺼집니다.

9. 리셋

- 만약 기기가 정상적으로 작동하지 않는 경우, 리셋을 하십시오. 기기가 재부팅됩니다.

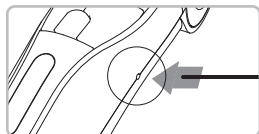

청소 및 소독

- 제품 청소 시, 부드럽고, 세정제 등이 첨가되어있지 않은 천 등으로 부드럽게 닦아 주십시오.
- 에탄올, 아세톤 등이 포함된 용매의 사용을 금합니다.
- 날카로운 기구 등으로 제품을 청소하지 마십시오. 제품에 스크래치나 고장 등을 일으킬 수 있습니다.
- 본 제품은 방수가 되지 않은 제품입니다. 물기나 습기로부터 주의해 주십시오.
- 교차 감염과 장치에 액체가 들어가는 일을 막기 위해서 일회용 커버를 사용하십시오.

유지보수와 배터리 교환

- 어떠한 경우라도 제품을 임의로 분해하지 마십시오.
- 배터리를 교체하는 경우 구입처나 제조자에게 연락하십시오.
- 사용의 편의를 위해 제품을 사용하지 않고 있는 경우는 충전을 시켜주시기 바랍니다.

8 문제해결

제품이 정상적으로 작동을 하지 않는 경우 다음을 참조하여 주십시오.

문제	원인 및 해결
버튼이 작동하지 않는 경우	<p>버튼에 무리한 힘이 가해졌을 경우, 버튼이 작동하지 않을 경우 제품이 작동하지 않을 수 있습니다. 버튼을 천천히 눌러주시고, 버튼의 상태를 확인하여 주십시오.</p> <p>제품의 설치가 제대로 되지 않는 경우 버튼이 작동하지 않을 수 있습니다. “5. 설치방법”과 “6. 사용법”을 참조하여 주십시오.</p> <p>카메라와 수신기의 연결이 되어있지 않는 경우에는 버튼이 작동하지 않습니다. 카메라와 수신기 사이에 장애물을 제거해 주십시오.</p>
OLED화면이 작동하지 않는 경우	<p>배터리 전압이 너무 낮아지는 경우 제품이 켜지지 않을 수 있습니다. 배터리를 충전하여 주십시오.</p>
사용 중 제품이 꺼지는 경우	<p>배터리 전압이 너무 낮아지는 경우 사용 중 제품이 꺼질 수 있습니다. 배터리를 충전하여 주십시오.</p> <p>제품이 작동을 5분 이상 하지 않으면 자동적으로 꺼지게 되어 있습니다.</p>
이미지 캡처가 되지 않는 경우	<p>다른 회사의 덴탈뷰어소프트웨어를 사용하는 경우 캡처 키 값이 올바르게 잡아 캡처가 되지 않을 수 있습니다. 해당 소프트웨어의 캡처를 위한 키보드 값을 확인하여 주십시오. 만약 해당 소프트웨어의 캡처 키 값을 모르는 경우 해당 소프트웨어 업체에 문의를 하시기 바랍니다. “HIDrsManager”파일을 이용하여 키 값을 변경 시켜주십시오.</p>
라이브화면이 보이지 않는 경우	<p>제품인식이 잘 되지 않는 경우에, 라이브화면이 보이지 않을 수 있습니다. 수신기의 연결상태를 확인해주시고, 장치관리자의 이미징장치를 확인하여 주십시오.</p> <p>만약 PC에 TV튜너가 설치되어 있다면 장치관리자에서 해당 TV튜너를 “사용안함”으로 설정하여 주시기 바랍니다.</p> <p>다른 회사의 덴탈뷰어소프트웨어를 사용하는 경우, 세팅의 문제와 관련이 있을 수 있습니다. 해당 덴탈뷰어소프트웨어 업체에 문의하시기 바랍니다.</p> <p>다른 회사의 덴탈뷰어소프트웨어를 사용하는 경우, 다른 이미징장치(웹캠 등)를 “사용안함”으로 설정하여 주시기 바랍니다.</p> <p>본 제품은 MJPG (MPEG)라이브포맷만을 지원합니다. 만약 다른 회사의 덴탈뷰어소프트웨어를 사용한다면 MJPG (MPEG)라이브포맷을 지원하는지 확인해보시기 바랍니다.</p> <p>특정 코덱이 설치되어있는 경우 (예, Klite codec) 제품영상이 나오지 않을 수 있습니다. 해당 코덱을 지원주시기 바랍니다.</p>

* 상기의 조치를 취한 후에도 증상이 고쳐지지 않는 경우 구입처나 생산자에게 문의 해주시시오.

9 사양

- 제품명: 구강용카메라
- 형명: IC-WHT60
- 품목분류 번호: A31020.05 (1)
- 상품명: Whicam Air
- 제조업체: 주식회사 굿닥터스
- 주소: (우21315) 인천광역시 부평구 부평대로 283 B동 208호 (청천동, 우림라이온스밸리)
- 연락처: 032) 424-6325
- 제조업허가번호: 제 2341 호
- 제조품목신고번호: 경인 제신 14-668 호
- 제조년월 및 제조번호: 제품에 표시
- 사용목적: 구강 내를 비추어 확대해 볼 수 있는 카메라 장비
- 수량: 1 SET
- 사용방법 및 사용상의 주의사항: 사용자매뉴얼 참조
- 전기충격에 대한 보호형식: B형 정작부 ⚡
- 본 제품은 의료기기입니다.

■ 사용, 배송, 보관 조건

	사용 시	보관 시	이동 시
온도	10~30℃	10~40℃	-10℃~50℃
습도	10~80%	20~80%	20~80%
기압	800 ~ 1360 hPa		

■ 부가정보






카메라 (헤드 포함)	작동 전압	3.7V
	치수	약 266 x 31 x 37 mm
	무게	약 140 g
	해상도	5M pixels
	센서/렌즈타입	CMOS / 액체렌즈
충전기	작동 전압	5V
	치수	약 169 x 148 x 89 mm
	무게	약 170 g
일회용커버	수량	약 100장 (무게기준) x 2 팩
	원재료	폴리에틸렌
어댑터	입력전원	AC 100 ~ 240 V
	출력전원	DC 5V 2A
	UL번호	E333054

■ 최소사양

PC환경	3.3 Ghz CPU, 4GB RAM
OS	Windows 7
USB포트	USB 2.0

* 상기의 스펙은 사전 공지 없이 변경될 수 있습니다. (PC환경에 따라서 인터넷 연결이 필요할 수 있습니다.)








■ 심볼

	본 제품은 유럽 규격 93 / 42 / EEC의 요구 사항을 충족하고 있습니다.		재사용 하지 마십시오.
	경고, 주의		유럽 대리인 표시
SN	시리얼 번호 00 00 00 0000 모델 / 제조월 / 제조년 / 일련번호		B 형 장착부


9 사양




이 기호는 EU Directive 2002 / 92 / ED Article 11의 요구 사항을 충족시키기 위해 적용됩니다.
이 장비는 유럽 연합 내에서 분류되지 않은 도시 폐기물로 폐기 할 수 없습니다.
폐기에 대한 현지 규정을 따르십시오.

	생산자 표시		동봉한 매뉴얼을 참조하여 주십시오.
	젖지 않게 주의 해 주세요.		이 박스 종이는 재활용이 됩니다.
	직사광선에 있는 곳에 두지 마세요.		깨질 위험이 있습니다.
	온도 변화에 민감 합니다.		뽕족한 것에 주의 해주세요.


10 액세서리

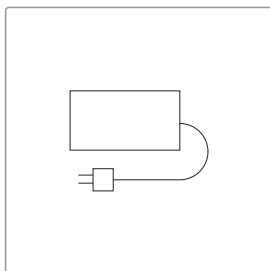

어댑터
(Part No. AC0105)

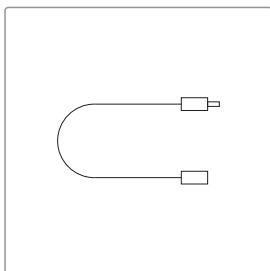


전원 케이블
(Part No. AC0111)

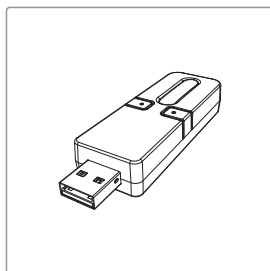


수신기-Air Direct
(Part No. AC0216)



일회용커버 - 약 100매
(35x100mm / narrow)
(Part No. AC0103)

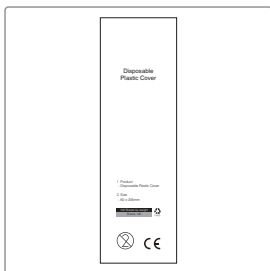


일회용커버 - 약 100매
(60 x 205mm / narrow)
(Part No. AC0102)

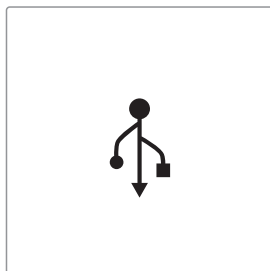

Data USB
(Part No. AC0201)

10 악세서리

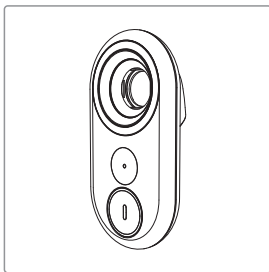


EIOS
(Part No. AC0213)

11 품질 보증

본 제품은 엄격한 품질관리 하여 출고된 제품입니다. 정상적인 작동환경에서 문제없이 사용할 수 있습니다. 정상적인 작동환경에서 사용하여 문제가 생기는 경우 구입일로부터 1년간 무상으로 수리가 가능합니다. 그러나 소비재의 (일회용케버 등) 경우는 품질보증에서 제외됩니다. 자세한 사항은 첨부되어있는 품질 보증서를 참조하여 주시기 바랍니다.

시리얼 번호 확인방법

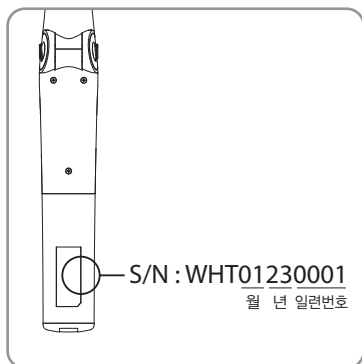



본 제품에 대하여 아래와 같이 품질을 보증합니다

제품명

모델명

고객정보

취급점

보증기간

<보증내용>

1. 보증기간내에 제조사의 결함이나, 제품자체의 불량이나
발생할 경우 동일 제품으로의 교환, 혹은 소비자 피해
보상 규정에 따라 보상에 드립니다.
2. 아래와 같은 경우는 보증기간 중이라도 무상 보상이
되지 않습니다.
* 사용자의 착각, 부주의로 인한 고장 및 손상
* 화재나 지진, 수해등 천재지변에 의한 고장 및 손상
* 소비자의 고의적 또는 과실로 인한 고장 및 손상
* 본사에서 보증하지 않는 제품을 사용하여 생긴 고장 및 손상
* 본 보증서가 없는 경우
3. 일반적인 치과 용도이외의 목적으로 사용하는 경우는
무상 보증이 되지 않습니다.
4. 보상방법은 소비자 보호법에 의한 소비자 피해보상기준에
따라 피해를 보상합니다.

성명 :

주소 :

판매점명 :

주소 :

전화번호 :

구입일 : 년 월 일부터

본체는 일년, 단 소모품은 제외
* 배터리는 6개월



주식회사 굿닥터스

(우21315)인천광역시 부평구 부평대로 283, B동 208호(중천동 우림라이온스밸리)

Tel: 032-424-6325 Fax: 032-424-6326 Email: info@gooddrs.com Website: http://www.gooddrs.com

